



Spy Security Systems

FS154 4 BUTTON REMOTE CONTROL WITH LONG BATTERY LIFE

The FS154 Remote controls can be used to activate and deactivate the console.

This series works on the "hopping code system" so it has no dip switches making it installable in seconds and able to accept a rotation of over 1,000,000 different system code combinations.

- The first button is for Silent Panic.
- The second button is for Home Armed / Disarmed.
- The third button for is Away (fully) Armed / Disarmed.
- The fourth button is for Disarm or door chime function.
- The LED indicates signal transmission OK and battery condition.

